


Corvette C5 Projector Headlight Installation Instruction

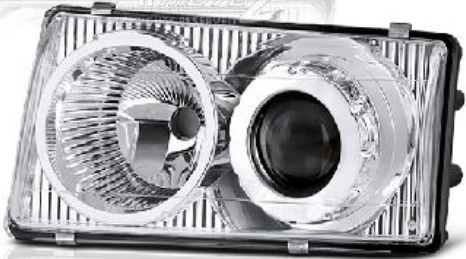

STERLING CHROME EDITION


VIPmotorz

Attentions: Required to use back Factory 9005 High beam Bulbs


1. Disconnect the negative side of the battery terminal or cable before installation.
2. Pop up the hood and remove the screws for the metal headlight covers and screws around the plastic headlight shrouds by using #20 Torx.



3. Remove the headlight assembly by losing two rear pivot screws

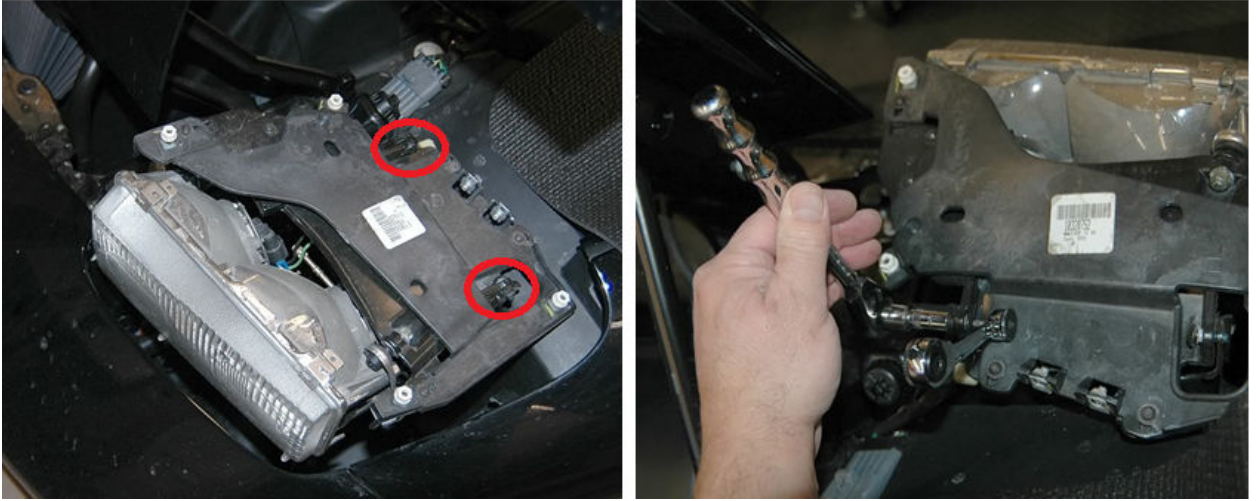

4. Remove the locking pin underneath the headlight housing that attached to the motor.

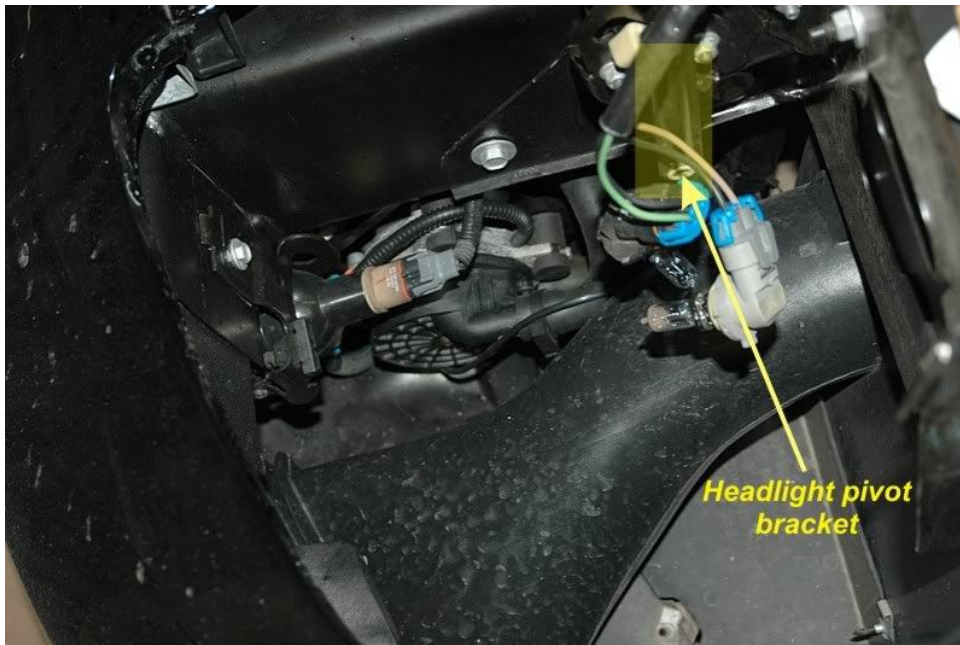

5. Once the headlight removed, losing 3 screws at the headlight bracket to separate the light housing.




6. For certain year of Corvette, there is bracket rib that will need to grind off to able to clear the projector housing.



7. Connecting the wiring harness to the headlight then attached the BLACK round terminal to chassis and RED Round terminal to the 12V junction point at the Fuse Box.



8. Connect the Headlight wiring harness as picture below.

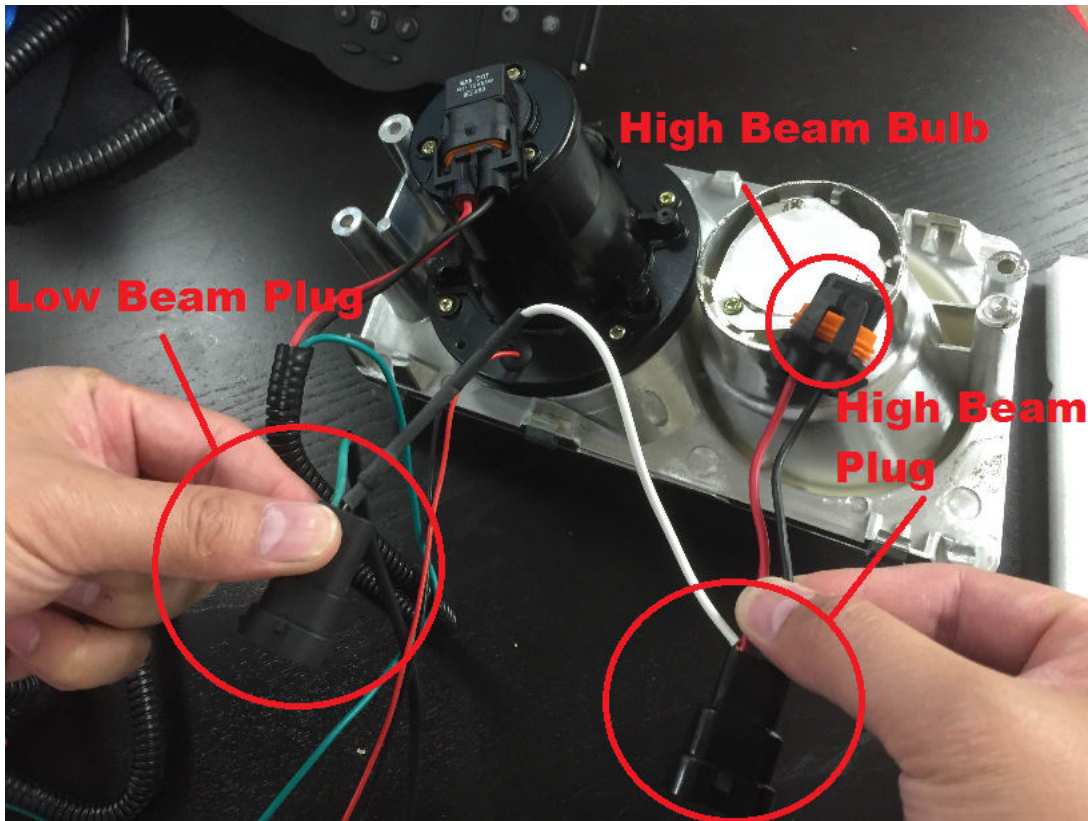

9. Reverse the removal procedure for install everything back.

10. Connect the battery back. Switch on the High & Low beam to see everything is function correctly and enjoy the new look for your Corvette!!

